

ONE·TOUCH™

www.ONETOUCHPRODUCTS.com

Amazing
Fat Eraser



USER MANUAL

Model no.: KC59

INTRODUCTION

Congratulations on your purchase of an Amazing Fat Eraser (Model no.:KC59). This incredible product will help you remove excess fat from casseroles, stews, broths and other high fat cooked foods. The Amazing Fat Eraser is incredibly simple to use. After chilling in the freezer, simply glide over hot food for a second or two allowing the cold metal plate to freeze the fat until it is solid. Then simply place in the scraper and twist to remove the fat and repeat as necessary. For convenience, the Amazing Fat Eraser can be stored in the freezer so it is always ready for use. The smaller Spot Eraser is ideal for use with small portions of food or for spot fat removal in many dishes.

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using your Amazing Fat Eraser

- The Amazing Fat Eraser **should not** be used by children.
- Your Amazing Fat Eraser is recommended for use with stews, casseroles, broths and similar hot foods with high fat content.
- **DO NOT** use your Amazing Fat Eraser with boiling or just boiled foods as burns may occur. Allow cooked foods to cool slightly for best results.
- Ensure the food is placed on a secure surface when using the Amazing Fat Eraser.
- Place your Amazing Fat Eraser within the scraper provided when not in use.

PARTS

Amazing
Fat Eraser



Scraper



Spot
Fat Eraser



GETTING STARTED

1. Put your Amazing Fat Eraser with the scraper in the freezer for at least 4 hours before use with the metal part pointing downwards. (see fig.1)
2. When ready for use, take your Amazing Fat Eraser and the scraper out of the freezer.
3. Glide it over the surface of the greasy food for one or two seconds and then lift out allowing the fat to attach on the metal plate. (see fig.2)
4. Place the Amazing Fat Eraser into the scraper and twist to remove the attached fat. (see fig.3)
5. Repeat the fat removal process as necessary.
6. After use, wash thoroughly and store in freezer (with metal plate pointing down) ready for next use.

Fig.1

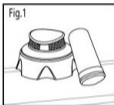


Fig.2


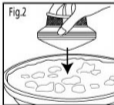


Fig.3

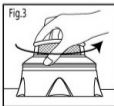

CLEANING AND CARE

Dishwasher

1. Allow your Amazing Fat Eraser to reach room temperature.
2. Place it on the top rack of your dishwasher.

Hand Washing

Wash in warm water with sponge or soft cloth.

DO NOT use abrasive materials.

Storage

1. Store your Amazing Fat Eraser within the scraper.
2. Place the unit in the freezer, ensuring it is standing the right way up. Store the product on its side or upside down in the freezer will cause the product to not function correctly.

TROUBLE SHOOTING

Fat does not completely attach on the aluminum dome.	<ol style="list-style-type: none">1. The Amazing Fat Eraser has not been sufficiently chilled (four hours is recommended).2. The food is too hot. Allow the food to cool slightly before using the Fat Eraser.
Fat residue remains on the aluminum surface after scraping.	<ol style="list-style-type: none">1. Ensure the Fat Eraser is located firmly in the center of the scraper when twisting.2. Clean the scraper if lots of fat has accumulated.

SPECIFICATIONS

Dimension: 106 mm (dia) x 64 mm (H)

Storage temperature: -20 to 40°C (-4 to 104°F)