

ONE·TOUCH™

www.ONETOUCHPRODUCTS.com

FROTHER



* PLEASE READ AND SAVE
THIS USE AND
CARE INSTRUCTIONS


USER MANUAL

Model no.: KC17

Thanks for purchasing the One Touch™ Frother. This high performance 2nd Generation Frother are designed to froth your Cappuccino, Mocha, Caffe Lattes and a host of other things.

Read all instructions carefully before using your Frother.

Parts

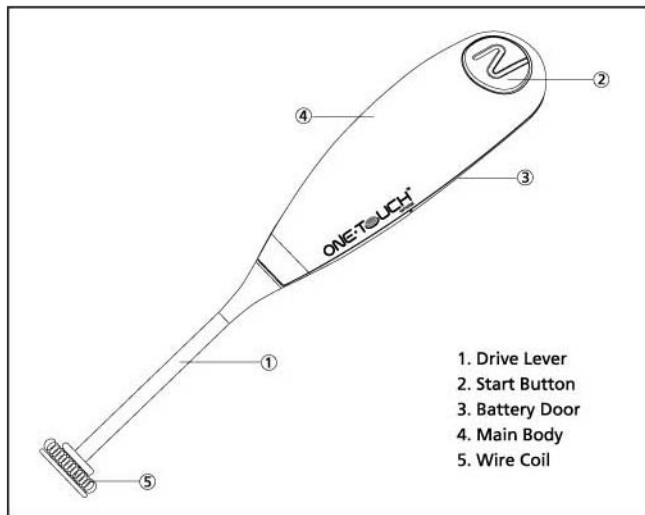

Getting Started


INSTALLATION

1. Plug the Drive Lever into the hole in front of the main body (Fig.1).



BATTERY INSTALLATION

1. Slide back the battery cover, remove and install 2 AA alkaline or rechargeable batteries into the battery compartment according to the polarity (+/-) instruction (Fig.2).
2. Replace the bottom cover after the batteries have been installed.

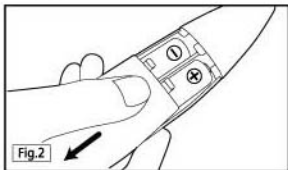

Note: Always replace both batteries at once and never mix old and new batteries or batteries of different types.

USING THE ONE TOUCH FROTHER

1. Immerge the tip of the Drive Lever and Wire Coil into the liquid vertically which you would like to froth (Fig.3).
2. Press and hold the Start Button to start the frothing and move around to produce a desired result.
3. When you are finished with the frothing, release the Start Button to stop.
4. Lift the Frother away from the liquid.



Care and Maintenance

1. Disassemble, the Drive Lever from the Main Body.
2. Wash the Wire Coil and the Drive Lever under tap water and dry them thoroughly with a dry cloth.
3. Wipe the Main Body with a damp cloth or a sponge, using mild non-abrasive cleaner, followed with a clean, dry cloth to dry it completely.

NOTE: NOT suitable for dish washer

Specification

Length: 8" (Full Piece) 3.75" (Drive Lever)

Battery: 2 x AA alkaline or rechargeable batteries

Disposal

The packaging material can be recycled. Please dispose of it in an Environmentally friendly manner and take it to a recycling centre.



If you wish to dispose of this equipment at any point, please also do so in an environmentally friendly manner. It should not be disposed of alongside general household waste. Instead, please take it to recycling point for electrical goods. Your local council will be able to advise you further.

Batteries should not be thrown away in household waste. Please ensure that you always dispose of batteries and rechargeable batteries only when they are empty. Your local council will be able to advise you further.