

ONE·TOUCH™

www.ONETOUCHPRODUCTS.com

## QUIK DEFROST™



PLEASE READ AND SAVE THIS  
USE AND CARE INSTRUCTIONS

**USER MANUAL**

Model no.: KC05

## INTRODUCTION



*Congratulations on your purchase of the Quik Defrost (Model No.: KC05). This incredible product will help you greatly reduce the defrosting time while retain food moisture and flavor without changes to food's nutrient structure. It also minimizes bacteria growth in a sanitized and enclosed environment. The Quik Defrost is incredibly simple to use. After placing the frozen food on the plate, just press the On/Off Button and close the cover. The food will thaw naturally and be ready to cook within minutes.*

### IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using your Quik Defrost

- Clean the Quik Defrost before first time use.
- Close supervision is necessary when your Quik Defrost is used by or near children.
- Take care to ensure the Quik Defrost is on a secure surface when operating.
- Switch it off after use.
- Store the unit out of reach of children.
- **DO NOT** use it in a conventional or microwave oven.
- **DO NOT** use it in freezer.
- **DO NOT** operate the product with wet hands.
- Always remove the batteries when storing the unit for a long period of time.

## PARTS

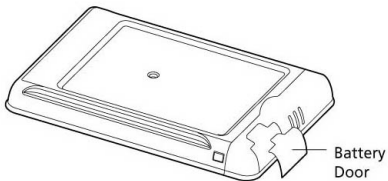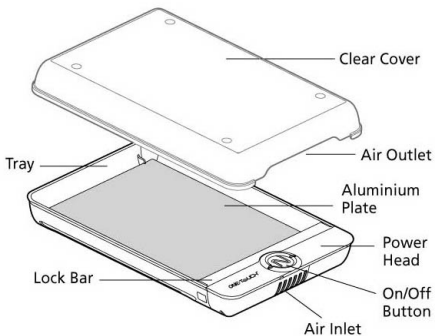

## **GETTING STARTED**

### Battery Installation

1. Switch off the Quik Defrost by pressing the On/Off Button.
2. Press the Battery Door slightly and pull outwards to take out the Battery Door.
3. Install 2 C size alkaline or rechargeable batteries into the battery compartment according to the polarity (+/-) instruction.
4. Put the Battery Door in place after the batteries have been installed. Always replace all batteries at one go and never mix old and new batteries or batteries of different types.
5. Take out the batteries if the Quik Defrost is stored for a long time.

### Operating the Quik Defrost

1. Put the frozen food on the Aluminium Plate.
2. Press the On/Off Button. You may hear sound coming out from the Quik Defrost which means it is working.
3. Put the Clear Cover on the top with the Air Outlet facing at the Power Head.
4. DO NOT obstacle the Air Inlet to let enough air be drawn in for best performance.
5. Switch the unit off when the defrosting process is complete.

## **CLEANING AND CARE**

1. Push either side or both sides of the Lock Bar and lift it up. (Tips: Move the tail of the Tray close to yourself for easy lifting of the Lock Bar)
2. Take away the Lock Bar and then lift the Power Head.
3. Take out the Aluminium Plate.
4. Pour out the liquid from the Tray if any.
5. All parts, except the Power Head and Aluminium Plate, are dishwasher safe.
6. Place the parts on the top rack of a dishwasher or wash the parts with warm water.
7. Wash the Aluminium Plate with warm water.
8. Clean the Power Head with a damp cloth. Never immerse the Power Head in water or any liquid.
9. Reassemble the Quik Defrost in the order of putting back the Aluminium Plate, Power Head and the Lock Bar after the parts are dry.
10. Always remove the batteries when storing the unit for a long period of time.
11. Store the unit in the Clear Cover for easy storage and out of reach of children.

## TROUBLE SHOOTING

The unit does not work.	The batteries are installed in an incorrect polar direction or the batteries are used up.
It gives out high pitch sound after it is switched on.	It is the sound of operation of pulling air in for defrosting.
The Lock Bar cannot be assembled back after cleaning.	The Aluminium Plate should be placed to the end of the Tray before inserting the Lock Bar.

## SPECIFICATIONS

Dimension: 315 x 207 x 65 mm (with cover up)

Storage temperature: 10 to 40°C (50 to 104°F)

Battery: 2 x C size alkaline or rechargeable batteries