

ONE·TOUCH™

www.ONETOUCHPRODUCTS.com

# Salad Wash'n Spin



**USER MANUAL**

Model no.: KC48

## INTRODUCTION


*Congratulations on your purchase of the Salad Wash'n Spin (Model No.: KC48). This incredible product will help you wash and spin salad in one bowl. The built-in tumbler effectively rinses dirt and pesticides with small amount of water. The unit can also wash greens with running water. With Rice Paddle, it can help you wash rice effortlessly.*

### **IMPORTANT SAFETY INSTRUCTIONS**

Read all instructions carefully before using your Salad Wash'n Spin

- Wash the Salad Wash'n Spin before first time use with soap and water.
- Close supervision is necessary when your Salad Wash'n Spin is used by or near children.
- Place the Bowl into a sink or onto a draining board when washing or spinning.
- Please note that water will come out from the Drainage Grille during washing.
- DO NOT USE in a conventional or microwave oven.
- DO NOT USE in freezer.
- Store the unit out of reach of children.

## PARTS

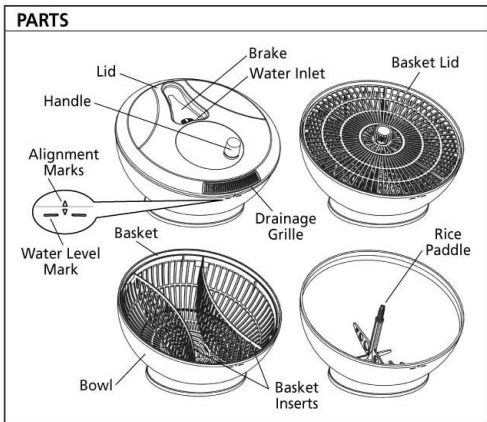

## GETTING STARTED

1. Wash the Salad Wash'n Spin before first time use with soap and water.
2. Please note that water will come out from the Drainage Grille during washing.

### Preparing to washing greens / vegetables

1. Place the Basket into the Bowl aligning the centre pivot.
2. Insert the Basket Inserts if washing small quantities of mixed greens / vegetables.
3. Arrange the greens / vegetables evenly inside the Basket or Basket Inserts.

### A. Washing with small amount of water

4. Place the Bowl into a sink or onto a draining board.
5. Add water up to the Water Level Mark.
6. Place the Lid onto the Bowl with Drainage Grille lowermost.
7. Turn the Handle slowly clockwise or anti-clockwise to agitate and wash contents.
8. Keep turning the Basket for several cycles or until enough time upon your discretion.
9. Tip water out of Drainage Grille and repeat as necessary.

### B. Washing with running water

4. Place the Bowl into a sink or onto a draining board.
5. Place the Lid onto bowl with Drainage Grille lowermost.
6. Open the water tap/faucet and let the gently running water fill the bowl via the Water Inlet and flow out of the Drainage Grille.
7. With the water still running, turn the Handle slowly clockwise or anti-clockwise to agitate and wash contents.
8. When clear water runs from the Drainage Grille, turn off water and tip water out of Drainage Grille.

### Spinning

Before spinning, drain excess water by tipping it through the Drainage Grille. Then turn the Handle in either direction for about ten to twenty seconds to spin the water out of the greens.

## Washing rice

1. Remove the Basket and place the Rice Paddle over the Bowl's centre pivot.
2. Add rice to the Bowl.
3. Close the Lid so that the Rice Paddle passes through the centre of the Basket Lid.
4. Place the whole unit into the sink or onto a draining board.
5. Open the water tap / faucet and let the gently running water fill the Bowl via the Water Inlet and flow out of the Drainage Grille.
6. Turn the Handle clockwise or anti-clockwise to wash the rice.
7. When clear water runs from the Drainage Grille, turn off water and tip water out of Drainage Grille.

## **CLEANING AND CARE**

1. All parts are dishwasher safe (top rack only).
2. The Basket Lid can be removed for cleaning by grasping it in the centre and gently pulling it away from the Lid.
3. Do not use abrasive cleaning products on any plastic parts – damage will occur.

## TROUBLE SHOOTING

Food trapped between the Lid and Basket Lid.	The Basket Lid can be removed for cleaning by grasping it in the centre and gently pulling it away from the Lid.
Water coming out from the Drainage Grille when washing salad.	Add water to or below the Water Level Mark. Turn Handle more slowly.
The unit vibrates during spinning.	Redistribute the contents of the Basket.
The Lid cannot fit on the Bowl.	The Basket may not be placed properly.

## SPECIFICATIONS

Dimension: 270 x 280 x 188 mm

Storage temperature: 10 to 40°C (50 to 104°F)