

ONE·TOUCH™

www.ONETOUCHPRODUCTS.com

# Deluxe Mandoline Slicer



**USER MANUAL**

Model no.: KC49

## INTRODUCTION

*Congratulations on your purchase of the Deluxe Mandoline Slicer (Model No.: KC49). This incredible product uses an ultra sharp serrated blade to give you effortless, high quality of slicing. A patented safety system ensures that the blade is automatically covered whenever the Mandoline Slicer is unattended. The easy-to-use height adjuster makes thin, medium or thick slicing, simple as well as providing a second blade safety lock during storage. Built-in Julienne Blades offer the convenience of julienne strips without needing to change blade. You are further protected with the extra large Hand Guard which helps you grip the vegetables for even safer slicing.*


### **IMPORTANT SAFETY INSTRUCTIONS**

Read all instructions carefully before using your Mandoline Slicer

- Mandoline Slicer uses very sharp blades and extreme caution must always be taken when the product is being used. Particular caution is required when the unit is disassembled for cleaning or removal of blockages.
- Always use the Hand Guard to protect your hand from cuts.
- Pay full attention when using your Mandoline Slicer.
- Take care to ensure the Mandoline Slicer is on a secure surface when slicing.
- When slicing, hold the Mandoline Slicer Handgrip and the Hand Guard firmly and comfortably.
- Hold the handle with palm facing up.
- Move the Hand Guard with the vegetables attached in a steady and controlled motion. Do not be tempted to rush.

- Check regularly to ensure that no finger or thumb is overhanging the Hand Guard.
- DO NOT allow children to use your Mandoline Slicer.
- DO NOT rely on the automatic safety feature, improper use or blockages could impair its function - always lock Handgrip and place out of the reach of children when not in use.
- Exercise caution if the slicer is placed in a dishwasher or washed by hand. Whenever possible, ensure that the blade is covered and the Safety Lock engaged.
- Store your Mandoline Slicer, with the Handgrip locked, out of reach of children.

## PARTS

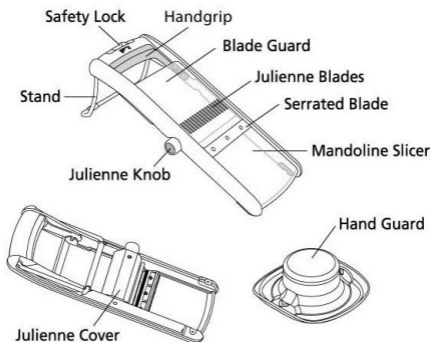

## **GETTING STARTED**

1. **Unfold the Stand if required. (The slicer can also be used over a bowl or handheld resting on a work surface by folding the Metal Stand).**
2. **Make sure the slicer is on a secure surface and away from children.**
3. **If julienne slices are required, move the Julienne Blades into the upright position by pressing the Julienne Knob inwards and then rotating it clockwise.**
4. **Slide the Safety Lock button to unlock the Handgrip and choose the slicing thickness: thin, medium or thick.**
5. **To allow slicing, gently squeeze the Handgrip – the Blade Guard will move away from the Serrated Blade and Julienne Blades. Release the Handgrip to immediately recover the blades.**
6. **Always use the Hand Guard to protect the hand when slicing. Press the Hand Guard over the vegetables so that the plastic needles hold the vegetables firmly. (Tips: Cut the vegetables into smaller pieces if necessary for a better grip by the Hand Guard.)**
7. **Place the vegetables with Hand Guard fixed on it over the sliding surface of the slicer.**
8. **Make sure the arrow mark on the Hand Guard points in the slicing direction.**
9. **Hold the Hand Guard firmly and move the vegetables slowly and steadily towards and past the blade to cut slices or julienne strips.**
10. **Move the Hand Guard back and forth to repeat the slicing action.**

11. When slicing is finished, release the Handgrip and move the Safety Lock to the locked position. Check that the Blade Guard has covered the blades.
12. To fold the Julienne Blade down, press the Julienne Knob inwards and rotate it anti-clockwise.

## **CLEANING AND CARE**

1. All parts are dishwasher safe (top shelf only).
2. Where possible, rinse under running water to remove blockages.
3. If disassembly is required:
  - a. Unclip and remove the Julienne Blade cover.
  - b. Place the Safety Lock into 'Thick' position, squeeze the Handgrip and unclip the Blade Guard from the Handgrip. (Exercise extreme caution as the Serrated Blade is now fully exposed.)
4. Unclip the side walls of the Handgrip to remove it completely.
5. Reassembly is the reverse of disassembly.
6. Store the unit, with the Handgrip locked, out of reach of children.

## TROUBLE SHOOTING

<p>The Handgrip and the Blade Guard does not work smoothly.</p>	<p>The Blade Guard may not be assembled properly after being dismantled for cleaning. Check that the Handgrip is unlocked and running smoothly in its side channels. Also check that the Blade Guard has been securely clipped to the Handgrip.</p>
<p>The Julienne Knob does not turn.</p>	<p>The Julienne Knob must be pressed inwards before turning clockwise or anti-clockwise.</p>
<p>The Julienne Slices are attached to each other.</p>	<p>Ensure that the slicing action is slow and steady so that the vegetable does not rock or bounce as it engages the Julienne Blades or the Serrated Blade.</p>
<p>The slicing is not smooth.</p>	<p>Food may build up underneath the slicer or the residue of vegetables stick around the serrated blade. Remove the food or residue and continue slicing.</p>

## SPECIFICATIONS

Dimension: 343 x 136 x 45 mm

Storage temperature: 10 to 40°C (50 to 104°F)